



Mountain View
Whisman
School District

Chromebook Orientation



Webcam
(front)




Webcam
(back)

Keyboard

Trackpad

Chromebook Stylus

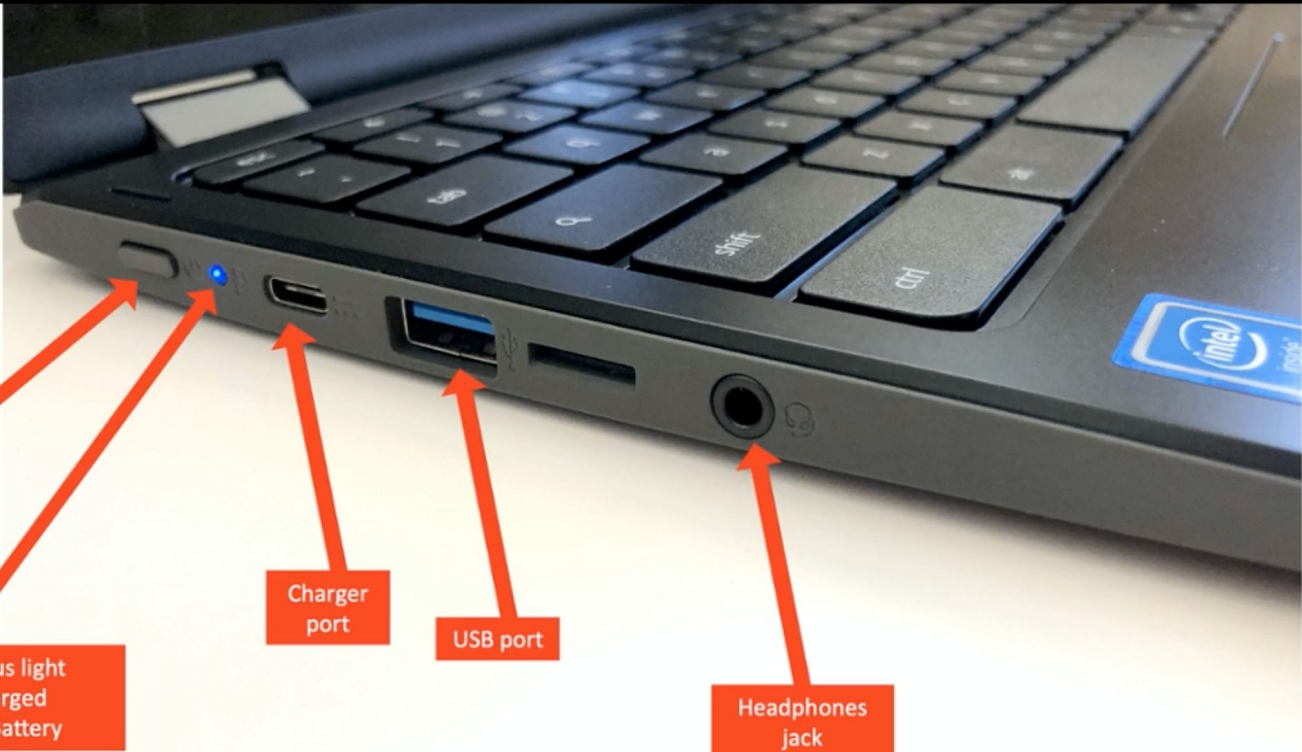

Power button

Battery status light
Blue = Charged
Red = Low Battery

Charger port


USB port

Headphones jack




Volume
button

USB port

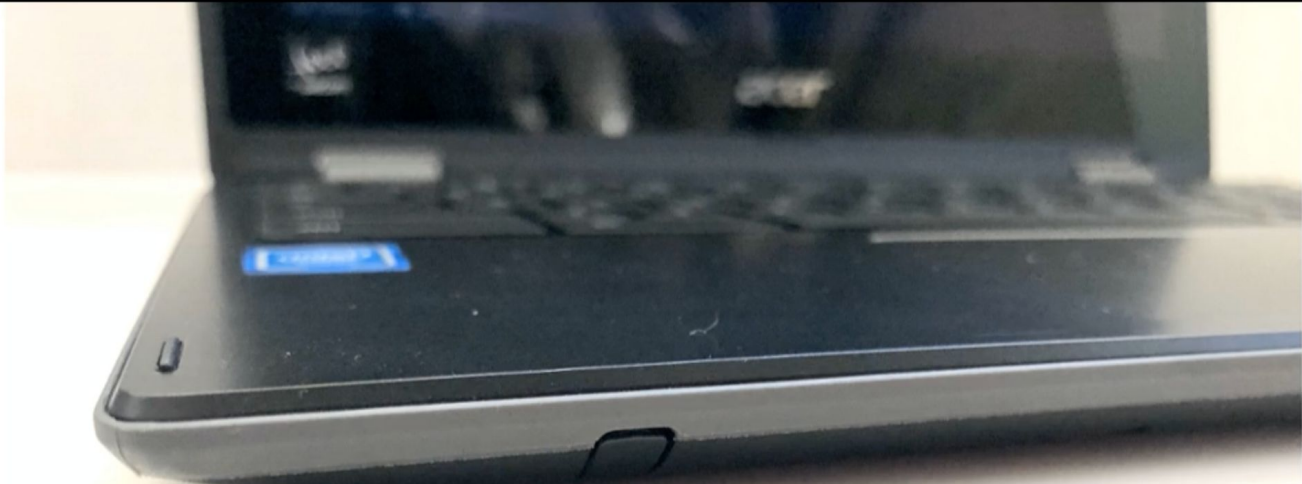


Chromebook Stylus


Your Chromebook can be put in multiple positions by folding the screen back



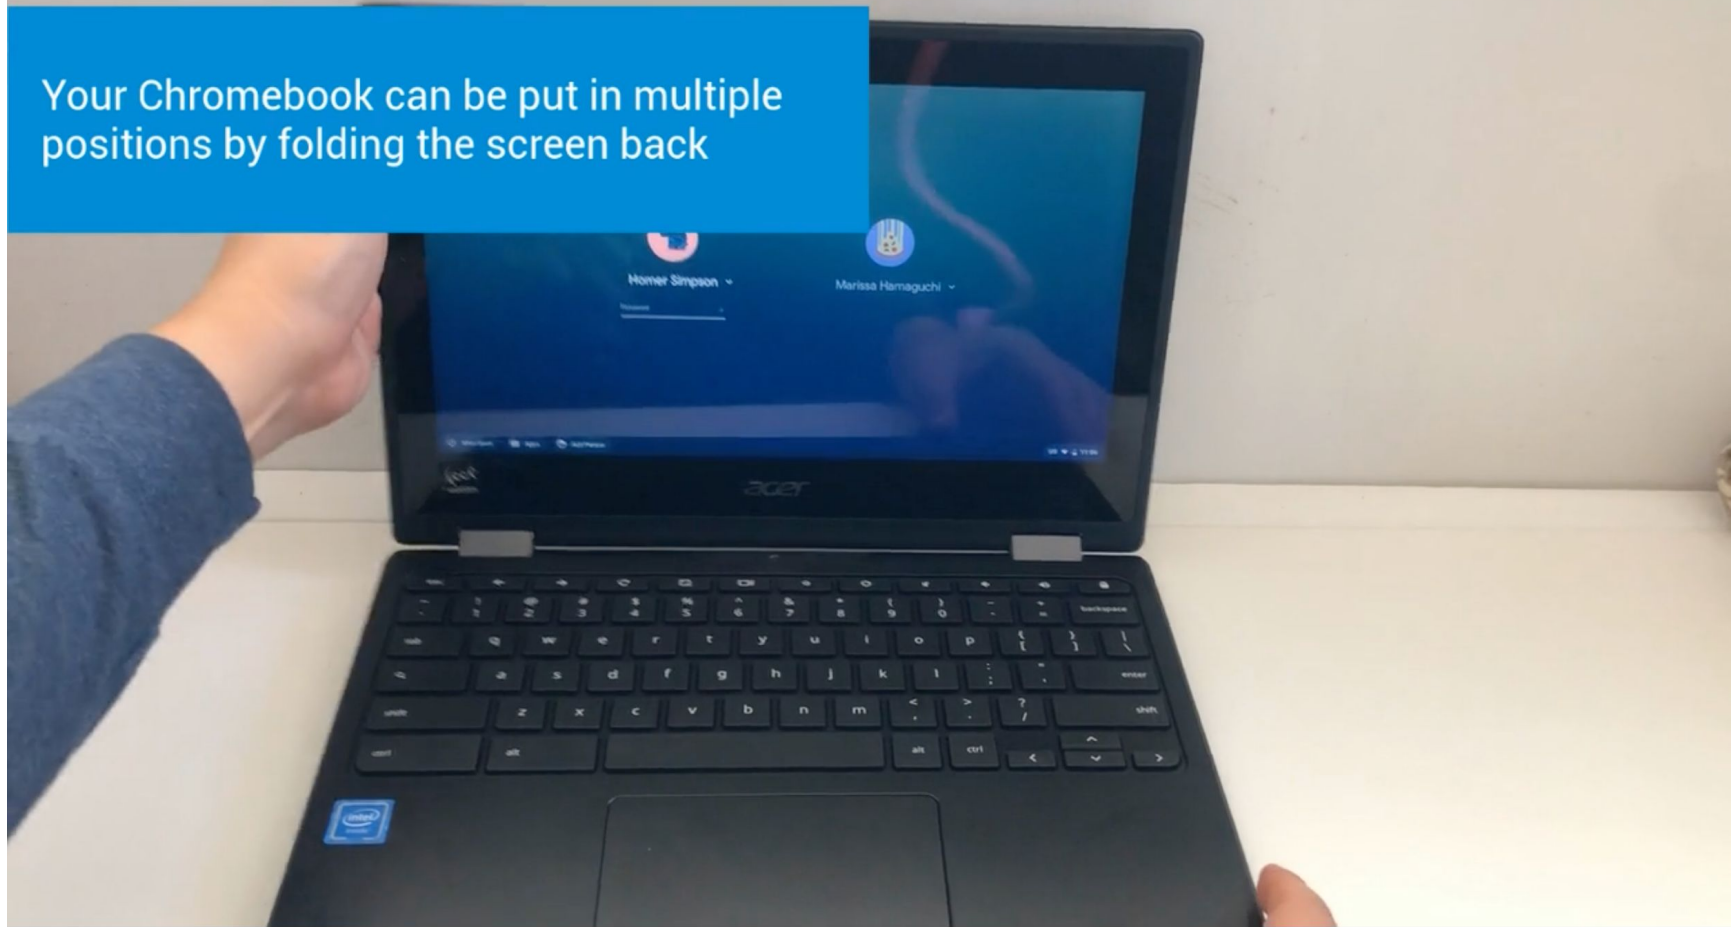


Your Chromebook can be put in multiple positions by folding the screen back

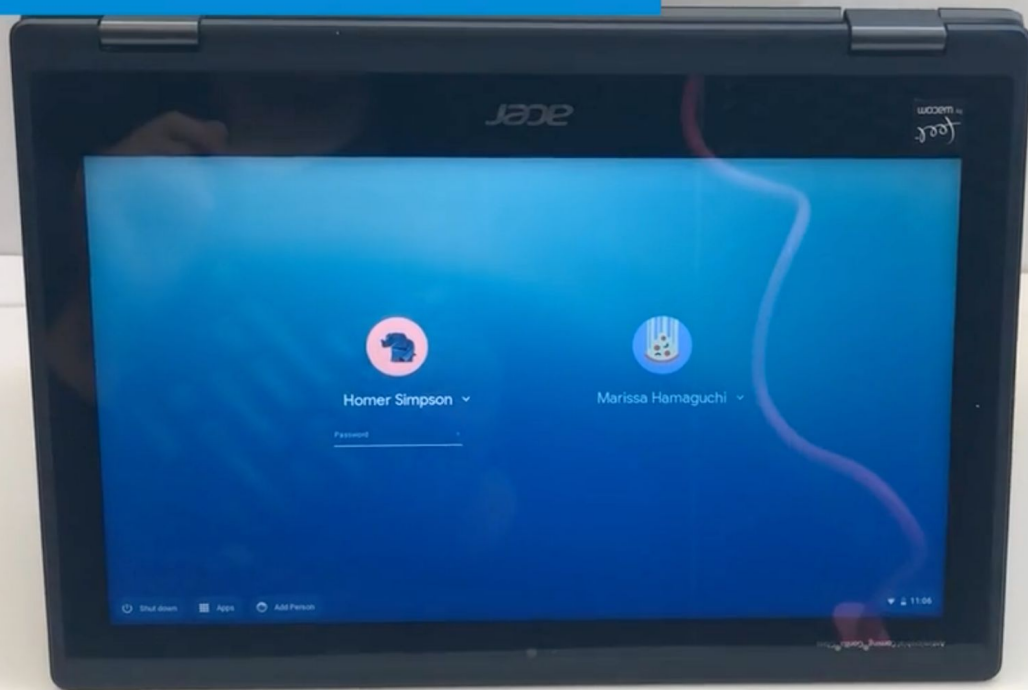


Your Chromebook can be put in multiple positions by folding the screen back

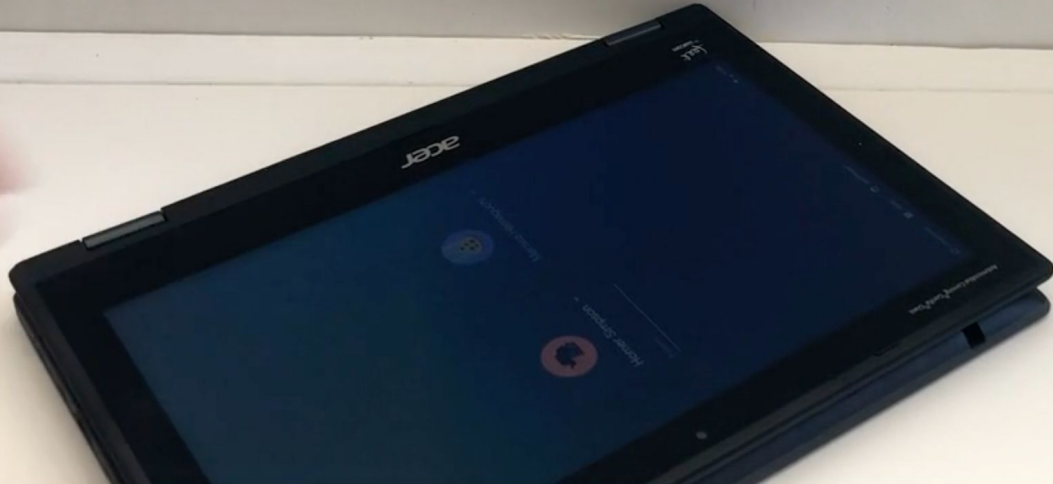

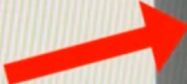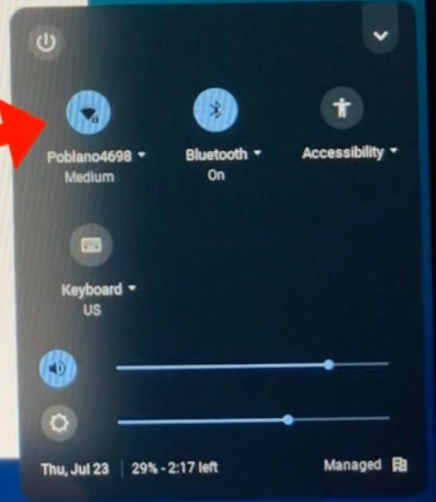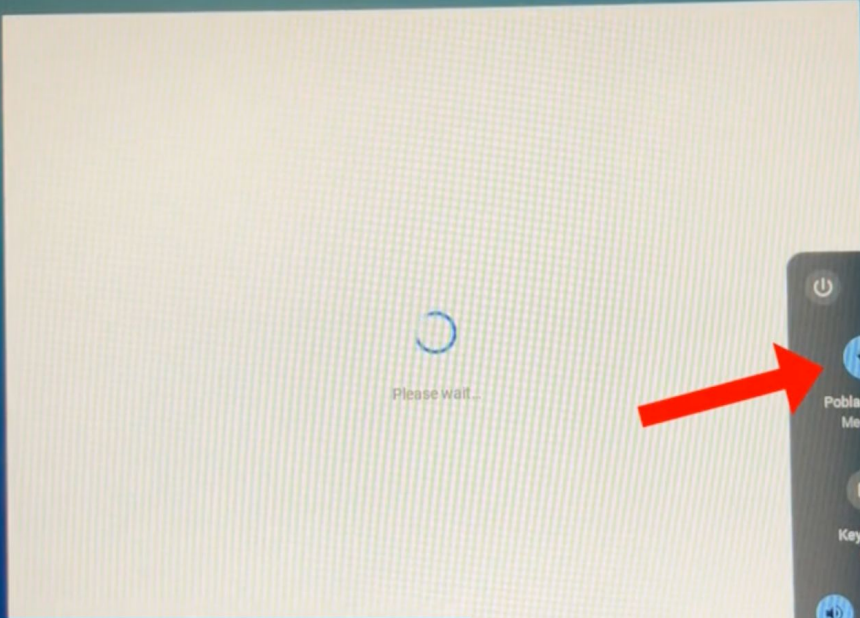

 You can also find WiFi/Internet settings in the bottom corner



Sign in to your Chromebook


Managed by mvwsd.org. [Learn more](#)

Enter your email

[Forgot email?](#)

Next

To add your account, click "Add a Person" and sign in with your student's @mvwsd.net account and password.

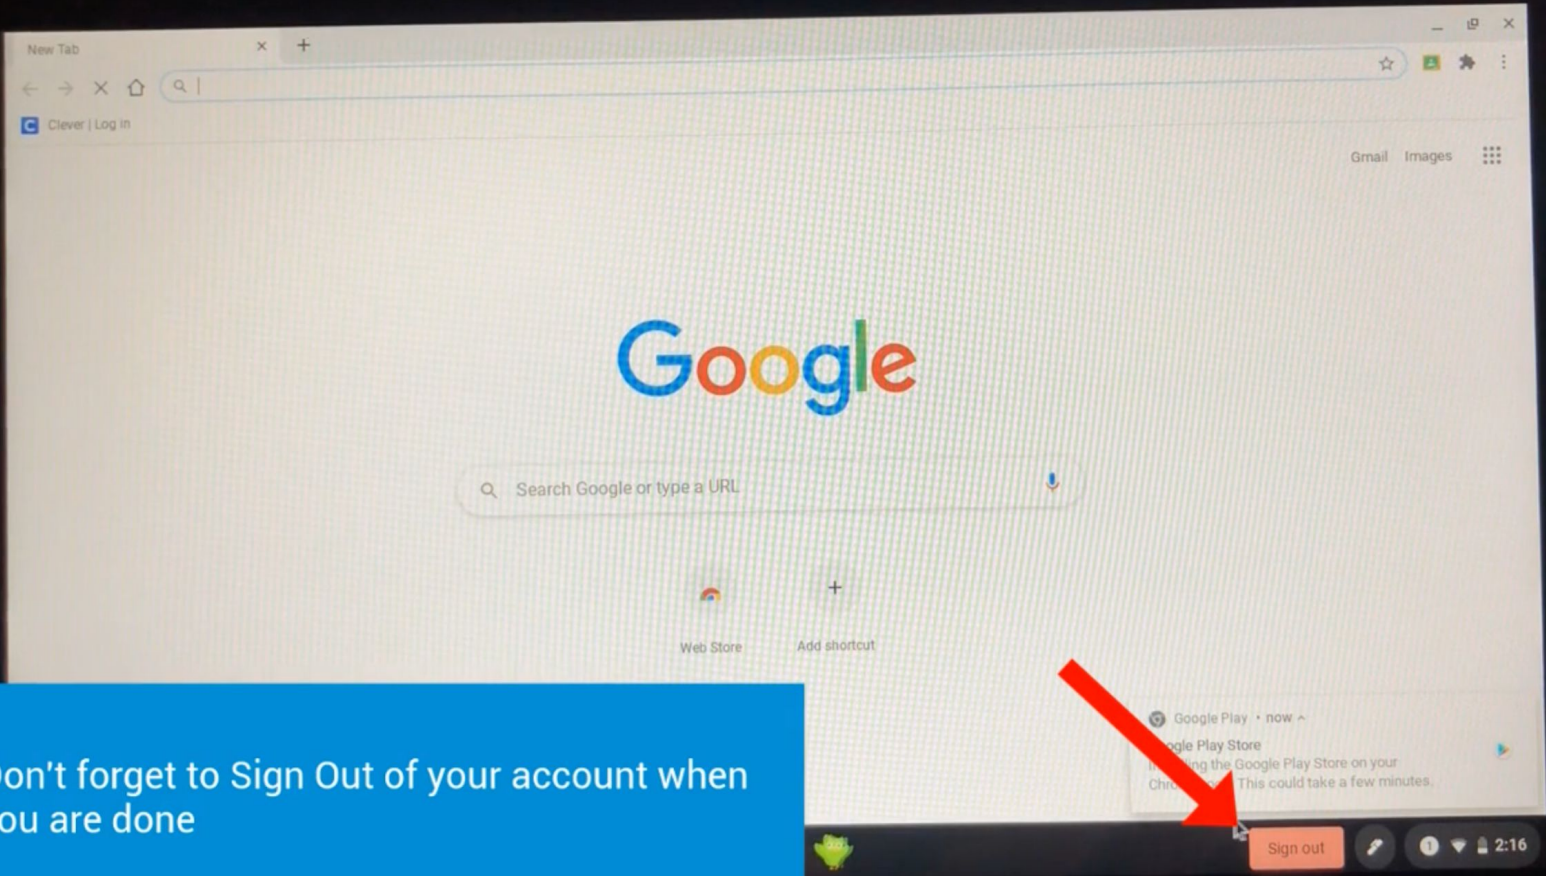

Don't forget to Sign Out of your account when you are done



Homer Simpson ▾

Password →



Next time, you can sign into your account by entering your password

Don't forget to Shut Down your Chromebook periodically (it needs a break too!)



Homer Simpson ▾

Password

 Shut down  Apps  Add Person

US    2:16



02:37

